



Photo Copyright © Tony Oliver

C-130 Hercules

Orion Technik Maintenance & Engineering Capability List

With more than 29 years' experience providing sustainment solutions to the C-130 operators. Orion Technik M&E repaired more than 1,000 line items in house from last 2 years. We are specialized in the complete repair and overhaul of:

- WHEELS & BRAKES
- ELECTRO-MECHANICAL
- LIGHTING
- AVIONICS
- ANTENNAS
- MECHANICAL
- ELECTRONICS
- HYDRAULIC
- INDICATORS
- RADAR

BRAKE ASSY



PN 9560685-1
PN 9560685

LIGHTS



PN G-6965-8
PN G-5400-5
PN D-6300-4571
PN 44910
PN 8555M6

VALVES



PN PYLB51239-2/-1
PN BYLB51044
PN CYLB51055

ACTUATORS



PN 1105123-1
PN 8037M2
PN 14711-200
PN A489-3

WEATHER RADAR SET



PN 2041440-0106
PN 2070963-0105
PN 2070964-0107

INDICATORS



PN 622-4298-001
PN 10040-5000-0101
PN 532-38105-202
PN 8DJ81CBD4

DESIGNATION	NSN	P/N
OVEN, WARMING, ELECTRIC	7310-00-905-6212	100
OVEN, WARMING, ELECTRIC	7310-00-905-6212	1000
SWITCH, PRESSURE	5930-00-615-7340	1031
SWITCH, PRESSURE	5930-00-615-7340	1553
RELAY, HYBRID	5945-00-628-6484	4047
SWITCH, INSTRUMENT	5945-00-075-4925	4100
DETECTOR, ICE	6340-00-304-5556	6316
GEARBOX, LANDING	1620-00-617-9123	8348
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-01-004-2086	8445
TRANSMITTER, PRESSURE	6685-00-526-7864	8465
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-01-218-2079	8544
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-01-217-5837	8545
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-01-222-2551	8546
INDICATOR, BEARING-DISTANCE-HEADING	5826-00-032-7024	18000
ANTENNA, DME/TACAN, BEACON	5985-00-673-5831	22135
ANTENNA, DME/TACAN, BEACON	5985-00-673-5831	22630
INDICATOR, MACH AND TRUE AIR SPEED	6610-00-006-5783	22705
LIGHT, EMERGENCY EXIT	6230-00-887-2308	44910
FAN, CENTRIFUGAL	4140-00-564-5980	50313
VALVE, LINEAR, DIRECTIONAL CONTROL	4820-01-033-2869	52760
MOTOR, HYDRAULIC	1650-00-815-9387	83308
TRANSMITTER PRESSURE	6620-00-901-7848	89000
INDICATOR, HORIZONTAL SITUATION	6605-00-034-2500	100524
REGULATOR, AIR PRESSURE, AIRCRAFT CABIN	1660-00-343-4692	102150
INDICATOR, BEARING DISTANCE HEADING	5826-00-089-7912	104470
PUMP, ROTARY	4320-00-631-4859	115385
PUMP, ROTARY	4320-00-631-4859	115715
MOTOR, HYDRAULIC	1650-00-204-1703	170998
MOTOR, HYDRAULIC	1650-00-204-1703	171232
CLOCK, MECHANICAL, PANEL	6645-00-950-8599	400164
CLOCK, MECHANICAL, PANEL	6645-00-950-8599	400191
CLOCK, MECHANICAL, PANEL	6645-00-950-8599	400201
CLOCK, MECHANICAL, PANEL	6645-00-150-6526	400202
CLOCK, MECHANICAL, PANEL	6645-00-076-3050	400240
ANTENNA, LOOP	5985-00-149-1451	405968
CLOCK, MECHANICAL, PANEL	6645-00-076-3050	433220
DETECTOR, HEAT	6350-01-280-1671	472475
ANTENNA, LOOP	5985-00-149-1451	505968
VALVE, LINEAR, DIRECTIONAL CONTROL	4810-01-066-0321	695197
INDICATOR, TEMPERATURE, ELECTRICAL RESISTANCE	6685-00-692-8341	695261
FAN, CENTRIFUGAL	4140-00-564-5980	695324
DETECTOR, ICE	6340-00-304-5556	695455
ACTUATOR, ELEVATOR TRIM TAB, ROTARY	1680-00-672-8931	695700
RELAY, ELECTROMAGNETIC	5945-00-675-7413	695715
RELAY, ELECTROMAGNETIC	5945-00-675-7412	695795
ACTUATOR, ELECTRO-MECHANICAL, LINEAR, OIL COOLER DOOR	1680-01-497-7142	695807
VALVE, ENGINE, BLEED AIR, CHECK	4820-00-006-5087	695813
VALVE, TEMPERATURE CONTROL, BUTTERFLY	4810-00-575-7781	697752
VALVE, BUTTERFLY	4810-01-039-0459	697753
PUMP, AUXILIAR	4320-00-174-5811	861195
DETECTOR, HEAT	6350-01-280-1671	891041
FAN, VANE, AXIAL	4140-01-041-4886	917108
POWER SUPPLY, RADAR	6130-01-056-8665	1889522
WHEEL, NOSE LANDING GEAR	1630-00-914-1329	9542662
BRAKE, MULTIPLE DISK	1630-00-825-4794	9560685

POWER SUPPLY, DC	6130-00-958-9796	9746077
VALVE, SOLENOID, SHUT-OFF	4810-00-987-3948	26130010
SENSOR, DUCT, OVERHEAT	1660-00-583-7106	27231294
VALVE, ENGINE, BLEED AIR, CHECK	4820-00-006-5087	27241301
THERMOSTAT, FLOW CONTROL	6685-01-119-6546	69580701
INDICATOR, PRESSURE	6620-00-514-5334	1391041046
INDICATOR, PRESSURE	6620-00-514-5334	1570041040
INDICATOR, LIQUID QUANTITY	6680-01-220-4090	697749-1
TRANSMITTER, PRESSURE	6685-00-526-7864	001965
PUMP, WINDSHIELD	1680-00-888-3687	003895-1
FAN, VANE, AXIAL	4140-01-041-4886	010006
FAN, VANE, AXIAL	4140-01-041-4886	010177
COMPENSATOR, FUEL QUANTITY	6680-00-869-9811	020-001-002
TRANSCEIVER, RADIO ALTIMETER	5841-01-561-2819	066-01153-0202
PROCESSOR, TCAS	5841-01-470-8036	066-50000-2930
DETECTOR, ICE	6340-00-304-5556	092-000-001
TRANSCEIVER, RADIO COMPASS	5821-00-503-4903	0R200268-4
INDICATOR, ELECTRICAL TACHOMETER	6620-01-322-7678	100-0034-29
OVEN, WARMING, ELECTRIC	7310-00-905-6212	1000-1
INDICATOR, FUEL QUANTITY	6680-01-220-4090	10040-1000-0101
INDICATOR, FUEL QUANTITY	6680-01-220-4091	10040-3000-0101
INDICATOR, FUEL QUANTITY	6680-01-224-7271	10040-5000-0101
INDICATOR, FUEL QUANTITY	6680-01-350-8048	10074-0101
INDICATOR, FUEL QUANTITY	6620-01-394-4018	10095-0101
INDICATOR, FUEL QUANTITY	6680-01-394-2555	10097-0101
REGULATOR, AIR PRESSURE, AIRCRAFT CABIN	1660-00-343-4692	102150-0
REGULATOR, AIR PRESSURE, AIRCRAFT CABIN	1660-00-343-4692	102150-0-13
REGULATOR, AIR PRESSURE, AIRCRAFT CABIN	1660-00-343-4692	102150-0-14
REGULATOR, AIR PRESSURE, AIRCRAFT CABIN	1660-00-343-4692	102150-0-15
CONTROLLER, AIR PRESSURE, AIRCRAFT CABIN	1660-00-062-0301	102538-2-1
REGULATOR, AIR PRESSURE, AIRCRAFT CABIN	1660-00-783-6159	103036-3
CLOCK, MECHANICAL, PANEL	6645-00-950-8599	1050-225
VALVE, APU, SHUT-OFF, BUTTERFLY	4810-00-299-7847	109710-1-1
VALVE, APU, SHUT-OFF, BUTTERFLY	4810-01-014-2632	109710-2
VALVE, APU, SHUT-OFF, BUTTERFLY	4810-01-014-2632	109710-2-1
VALVE, APU, SHUT-OFF, BUTTERFLY	4810-01-229-3584	109710-6-1
VALVE, APU, SHUT-OFF, BUTTERFLY	4810-01-393-3991	109710-9
VALVE, APU, SHUT-OFF, BUTTERFLY	4810-01-229-3584	109710-9-1
ACTUATOR, OIL COOLER DOOR, ELECTRO-MECHANICAL	1680-01-254-6893	1105123-1
VALVE, FLUID, REGULATING	4820-00-810-2061	1121-8-9-00
VALVE, FLUID, REGULATING	4820-00-810-2061	1121F8-9-0
VALVE, FLUID, REGULATING	4820-00-810-2061	1121F8-9-00
CONTROL, PUBLIC ADDRESS SET	5831-00-106-2733	113-10105
WINCH, AIRCRAFT MOUNTED	1680-00-733-3491	1184R125
TRANSMITTER, OIL QUANTITY	6680-01-419-1995	12-10001-01
TRANSMITTER, OIL QUANTITY	6680-01-419-1995	12-10001-10
GYROSCOPE, DISPLACEMENT	6615-00-900-5959	121672-01-17
TRANSMITTER, PRESSURE	6620-00-553-8988	1228-041040
TIMER, ELECTRICAL, STOP	6645-00-091-7107	124236-1
FAN, CENTRIFUGAL	4140-00-564-5980	12DB-0594
ANTENNA, ADF	5985-00-689-6576	137A6
ANTENNA, LOOP, ADF	5985-00-689-6576	137A-6
INDICATOR, PRESSURE	6620-00-514-5334	1391-041046
VALVE, NLG, SHUTTLE	4820-00-978-8886	13V600-6
LATCH ASSY, CONVEYOR	1670-00-989-6799	14711-200
INDICATOR, TEMPERATURE, ELECTRICAL RESISTANCE	6685-00-692-8341	147B31B
INDICATOR, PRESSURE	6685-00-514-5061	1521BU4-02

INDICATOR, PRESSURE	6685-00-514-5061	1521U4-02
INDICATOR, ANTI-ICING	6685-00-530-3614	152B4
INDICATOR, ANTI-ICING	6685-00-530-3614	152B44
INDICATOR, PRESSURE	6620-00-514-5334	1570-041040
INDICATOR, PRESSURE	6620-00-514-5334	1570B041040
INDICATOR, PRESSURE	6620-00-514-5334	1570B-041040
INDICATOR, PRESSURE	6620-00-514-5334	1570C041041
INDICATOR, PRESSURE	6620-00-514-5334	1570C-041041
LIGHT, LANDING, AIRCRAFT	6220-00-299-4621	1593-503
GYROSCOPE, RATE OF TURN	6615-00-137-6038	16VZ001-55
TRANSMITTER, PRESSURE	6685-00-526-7864	172-1704
SWITCH, STEPPING	5930-01-113-3970	172937-001
INDICATOR, BEARING-DISTANCE-HEADING	5826-00-032-7024	18000-2
JUG, INSULATED	7330-00-532-5867	180-147
INDICATOR, PRESSURE	6620-00-514-5334	18-1101
INDICATOR, BEARING-DISTANCE-HEADING	5826-00-032-7024	18-1686-2
TRANSMITTER, PRESSURE	6620-00-553-8988	18-1699
TRANSMITTER, PRESSURE	6685-00-526-7864	18-1704
TRANSMITTER PRESSURE	6620-00-901-7848	18-1724
TRANSMITTER PRESSURE	6620-00-901-7848	18-1724-3
INDICATOR, PRESSURE	6620-00-514-5334	18-2021
TRANSMITTER, PRESSURE	6620-01-256-9703	18-3114-2
VALVE, FUEL SYSTEM	2915-00-626-3123	190772-2
INDICATOR, RUDDER, POSITION	6610-00-580-9690	19-20-281
FAN, CENTRIFUGAL	4140-00-564-5980	19A513
SWITCH, PRESSURE	5930-00-615-7340	1G107
INDICATOR, TORQUEMETER	6620-01-038-5801	201-004-001
CLOCK, MECHANICAL, PANEL	6645-00-950-8599	2012273-01
INDICATOR, MACH AND TRUE AIR SPEED	6610-00-006-5783	20140-0351
INDICATOR, PRIMARY, FUEL QUANTITY	6680-01-290-5920	20-224-01
INDICATOR, REPEATER, FUEL QUANTITY	6680-01-290-7552	20-225-01
INDICATOR, WEATHER, RADAR	6210-01-408-7389	2041232-1104
ANTENNA, WEATHER, RADAR	5985-01-194-2321	2041440-0104
ANTENNA, WEATHER, RADAR	5985-01-315-0315	2041440-0106
ANTENNA, WEATHER, RADAR	5985-01-408-7393	2070409-0101
TRANSCEIVER, WEATHER, RADAR	5821-01-408-7392	2070410-0101
TRANSCEIVER, WEATHER, RADAR	5841-01-194-2452	2070963-0104
TRANSCEIVER, WEATHER, RADAR	5841-01-314-9947	2070963-0105
INDICATOR, WEATHER, RADAR	5841-01-193-6436	2070964-0106
INDICATOR, WEATHER, RADAR	5841-01-314-9991	2070964-0107
REGULATOR, VOLTAGE	6110-01-109-5099	20B95-4A
ACCELEROMETER, MECHANICAL	6610-00-007-1030	2119-500
RELAY, HYBRID	5945-00-628-6484	21-545
WHEEL, NOSE LANDING GEAR	1630-00-914-1329	219A967
WHEEL, NOSE LANDING GEAR	1630-00-914-1329	219A967-1
REFRIGERATOR, AIR CYCLE	1660-01-275-5646	2200440-7-3
VALVE, BRAKE CONTROL	1630-00-998-7897	23410-3
ALTIMETER, PRESSURE	6610-01-074-2819	23932-012
WHEEL, MAIN LANDING GEAR	1630-01-188-6735	250A200
WHEEL, MAIN LANDING GEAR	1630-01-188-6735	250A2001LC
WHEEL, MAIN LANDING GEAR	1630-01-188-6735	250A200-1LC
INDICATOR, PRESSURE	6620-00-514-5334	25100A15A1B1
INDICATOR, PRESSURE	6620-00-514-5334	25200A15A1-1A1
INDICATOR, PRESSURE	6620-00-514-5334	25200A15B1-1A1
INDICATOR, PRESSURE	6620-00-514-5334	25201A15B2-1A1
INDICATOR, PRESSURE	6620-00-514-5334	25201A15B4-1A1
INDICATOR, PRESSURE	6620-00-514-5334	25201-A15B-4-1C2

INDICATOR, PRESSURE	6620-00-514-5334	25201A15C7-2B2
THERMOSTAT, FLOW CONTROL	6685-01-119-6546	25530562-01
VALVE, SOLENOID CONTROLLED, SHUT-OFF	4810-00-730-2852	25730032-04
CONTROLLER, DIGITAL	6605-00-447-9665	2586261-1
GYROSCOPE, DIRECCIONAL	6615-00-447-9683	2586333-1
GYROSCOPE, DIRECCIONAL	6615-00-180-0895	2586333-2
GYROSCOPE, DIRECCIONAL	6615-01-065-7226	2586333-3
AMPLIFIER, POWER SUPPLY	6605-00-999-2411	2589226-1
VALVE, SOLENOID, SHUT-OFF	4810-00-987-3948	26130010-01
TRANSMITTER, PRESSURE	6685-00-526-7864	270-2261-010
CONTROL BOX, TEMPERATURE	1660-01-014-4509	27231317-01
VALVE, ENGINE, BLEED AIR, CHECK	4820-00-006-5087	272-41-301
LIGHT, LANDING, AIRCRAFT	6220-00-299-4621	272B308042
INDICATOR, MAGNETIC VARIATION	6655-01-283-0303	275540-003
ALTIMETER, ENCODING	6610-01-259-0251	28007-204
GENERATOR, TACHOMETER	6680-00-445-1246	2CM9AAH4
TRANSMITTER, EMERGENCY LOCATOR (ELT)	5826-01-307-7380	3000-8
TRANSMITTER, EMERGENCY LOCATOR (ELT)	5826-01-307-7380	3000-9
SWITCH, PRESSURE	5930-00-615-7340	3078-1
VALVE, BUTTERFLY, SHUT-OFF	4810-00-796-1672	321502-4-1
INDICATOR, COURSE	5826-01-065-9189	331A-8G
INDICATOR, BEARING DISTANCE HEADING	5826-00-953-9298	331C-4F
GENERATOR, TACHOMETER	6680-00-445-1246	332C218P2
SERVO, AUTO-PILOT, PRIMARY	-----	334C-6B
TRANSMITTER, PRESSURE	6685-00-526-7864	3-43512-3
GYROSCOPE, RATE OF TURN	6615-00-134-5980	345A-7
GYROSCOPE, RATE OF TURN	6615-00-134-5980	345A-7A
ACCELEROMETER, ELECTRICAL, LINEAR	6615-01-043-2763	345C-2A
INDICATOR, VERTICAL VELOCITY	6610-00-473-5046	35160-0124
TRANSMITTER, PRESSURE	6620-00-553-8988	3567709-1501
TRANSMITTER PRESSURE	6620-00-901-7848	3567745-1701
SWITCH, APU, SLIDE	5930-01-019-5594	3604174-1
SWITCH, APU, SLIDE	5930-01-019-5594	3604174-1-1
INDICATOR, RADIO MAGNETIC	5826-00-505-3094	36104-1H-8-A1
INDICATOR, RADIO MAGNETIC	5826-00-505-3094	36104-1L-11-A2
STARTER, ENGINE, ELECTRICAL	2920-00-906-6251	372697-10
STARTER, ENGINE, ELECTRICAL	2920-00-906-6251	372697-6
POWER SUPPLY	6130-01-217-5880	38106-001
PUMP, WINDSHIELD	1680-00-888-3687	3895-1
VALVE, STARTER, CONTROL	2925-01-038-5770	38E73-4A
VALVE, BUTTERFLY	4810-01-040-2372	396308-2-1
VALVE, BUTTERFLY	4810-01-040-2372	396308-2-2
VALVE, TEMPERATURE CONTROL, BUTTERFLY	4810-00-575-7781	398648-1-1
VALVE, TEMPERATURE CONTROL, BUTTERFLY	4810-00-575-7781	398648-1-2
VALVE, BUTTERFLY	4810-00-575-7789	398650-1-1
VALVE, BUTTERFLY	4810-01-039-0459	398654-1-2
VALVE, BUTTERFLY	4810-01-039-0459	398654-1-3
VALVE, BUTTERFLY	4810-01-039-0459	398654-1-4
VALVE, BUTTERFLY, SHUT-OFF	4810-00-796-1672	3A95550-107
TRANSCEIVER, RADAR	5841-00-089-7179	4023400-0501
RELAY, HYBRID	5945-00-628-6484	4047-1
ANTENNA, LOOP	5985-00-149-1451	405968-1
TRANSDUCER, WHELL SPEED	6695-00-055-6404	40-621
CLOCK, MECHANICAL, PANEL	6645-00-950-8599	4080A
VALVE, ENGINE, BLEED AIR, CHECK	4820-00-006-5087	40D830-1
VALVE, ENGINE, BLEED AIR, CHECK	4820-00-006-5087	40D830-3
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-01-181-9874	4344D1-4

ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-01-222-2551	4344D2-1
ACTUATOR, ELECTRO-MECHANICAL, ROTARY	1680-01-004-2086	4344EA2
ACTUATOR, ELECTRO-MECHANICAL, ROTARY	1680-01-004-2086	4344EA-2
ANTENNA, RADIO ALTEMETER	5985-00-758-4548	437X-1
ALTIMETER, PRESSURE	6610-01-074-2819	43932-052
LIGHT, EMERGENCY EXIT	6220-00-370-5447	44910-5
LIGHT, LANDING, AIRCRAFT	6220-01-437-7640	45-0325-1
LIGHT, LANDING, AIRCRAFT	6220-01-437-7640	45-0325-3
TRANSMITTER, EMERGENCY LOCATOR (ELT)	5821-01-561-9503	453-5060
TIMER, ELECTRICAL, STOP	6645-00-091-7107	468100-0-1
TIMER, ELECTRICAL, STOP	6645-00-091-7107	468100-1
INDICATOR, RADIO MAGNETIC	6655-01-394-5119	482-0061-030
RELAY, HYBRID	5945-00-628-6484	483A
ANTENNA, DME/TACAN, BEACON	5985-00-673-5831	4K95000-253A
VALVE, LINEAR, DIRECTIONAL CONTROL	4810-00-728-3396	50150-20
VALVE, LINEAR, DIRECTIONAL CONTROL	1680-00-809-8502	502600-7
ANTENNA	5985-00-217-0457	50F12696
THERMOSTAT, FLOW CONTROL	6685-01-119-6546	5-10052
ALTIMETER, ENCODING	6610-01-259-0251	518-28007-204
ALTIMETER, ENCODING	-----	518-28007-921
RECEIVER, RADIO NAVIGATION	5826-01-481-6179	51RV-5B
TRANSCEIVER, RADIO BEACON	5826-00-960-0830	51Z4
TRANSCEIVER, RADIO	5821-00-893-2906	522-1501-00
TRANSCEIVER, RADIO	5821-00-893-2906	522-1501-000
TRANSCEIVER, RADIO	5826-00-142-9449	522-1501-041
CONTROL, RADIO SET	5821-00-838-7051	522-2213-00
CONTROL, RADIO SET	5821-00-838-7051	522-2213-000
INDICATOR, BEARING DISTANCE HEADING	5826-00-953-9298	522-2377-003
CONTROL, NAVIGATION	5895-01-099-8589	522-2447-252
ANTENNA, LOOP, ADF	5985-00-689-6576	522-2615-005
ANTENNA, VHF	5985-01-097-8681	522-2646-000
ANTENNA, VHF	-----	522-2646-014
CONTROL, SERVO, AUTO-PILOT	-----	522-2900-026
CONTROL, SERVO, AUTO-PILOT	6615-01-038-7294	522-2900-057
TRANSCEIVER, RADIO BEACON	5826-00-960-0830	522-2996-000
TRANSCEIVER, RADIO BEACON	5826-00-960-0830	522-2996-014
COUPLER, ANTENNA	5985-00-939-7495	522-3443-00
COUPLER, ANTENNA	5985-00-939-7495	522-3443-000
TRANSCEIVER, RADIO ALTIMETER	5826-01-013-0955	522-3698-002
TRANSCEIVER, RADIO ALTIMETER	5826-00-758-4546	522-3698-003
RECORDER, SOUND	5835-01-103-7517	522-4057-001
INDICATOR, RADIO ALTIMETER	5841-00-758-4547	522-4114-003
ANTENNA, RADIO ALTEMETER	5985-00-758-4548	522-4140-001
ANTENNA, RADIO ALTEMETER	5985-00-758-4548	522-4140-006
ANTENNA, RADIO ALTEMETER	5985-00-758-4548	522-4140-007
ACCELEROMETER, ELECTRICAL, LINEAR	6615-01-043-2763	522-4329-002
GEAR BOX ASSYFLAP DRIVEMOTOR DRIVEN	1680-00-789-9345	523EA9
VALVE, LINEAR, DIRECTIONAL CONTROL	4810-01-066-0321	53150-1
INDICATOR, MACH AND TRUE AIR SPEED	6610-01-263-1400	532-38105-202
ALERTER, ALTITUDE	1680-01-201-5691	540-25100-004
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-00-973-4891	540538-2-1
CONTROL PANEL, DIRECTION FINDER	5826-00-535-6629	54D12603
AMPLIFIER, ELECTRONIC TEMPERATURE DATUM	5996-01-096-4648	5502636-2
CONTROL, SERVO, AUTO-PILOT	6615-01-038-7294	562C-5
DIRECTION FINDER SET	5826-01-008-4097	568-4838-001
ALTIMETER, PRESSURE	6610-01-074-2819	570-23932-012
DETECTOR, ICE	6340-00-304-5556	575-7

SWITCH, PRESSURE	5930-00-615-7340	575-716
CONTROL, AIR DATA	6615-01-038-7296	590A-3J
CONTROL, AIR DATA	6615-01-188-4494	590A-3K1
CONTROL, AIR DATA	6615-01-188-4494	590A-3KI
COOLER, ENGINE, OIL	2935-00-966-3321	5A527
COOLER, ENGINE, OIL	2935-00-966-3321	5A527-000
PUMP, ROTARY	4320-00-631-4859	60-551
PUMP, ROTARY	4320-00-631-4859	60-5851
SELECTOR, FLIGHT MODE	6615-01-038-7295	614E-23R
CONTROLLER, FLIGHT, AUTOPILOT	6615-01-038-7299	614E-5A
TRANSCEIVER, VHF, RADIO	-----	618M-3
TRANSCEIVER, RADIO VHF	-----	618M-5A
TRANSCEIVER, UHF, RADIO	5821-00-100-7931	622-0356-001
TRANSCEIVER, UHF, RADIO	5821-01-020-3970	622-0356-002
DIRECTION FINDER SET	5826-01-008-4097	622-0902-001
DIRECTION FINDER SET	5826-01-008-4097	622-0902-005
SELECTOR, FLIGHT MODE	6615-01-038-7295	622-0945-007
CONTROL, AIR DATA	6615-01-038-7296	622-1001-002
TRANSCEIVER, VHF, RADIO	5821-01-038-7301	622-1396-002
TRANSCEIVER, VHF, RADIO	5821-01-316-3554	622-1396-102
CONTROL PANEL, TACAN, TRANSCEIVER	5895-01-012-7084	622-2360-001
ADAPTER, BEARING	5826-01-554-6297	622-2889-001
INDICATOR, ATTITUDE DIRECTOR	6610-01-101-1927	622-3374-002
TRANSCEIVER, RADIO ALTIMETER	5841-01-220-1390	622-3890-003
INDICATOR, DME	5840-01-188-4694	622-3915-001
INDICATOR, HORIZONTAL SITUATION	6605-01-101-1883	622-4298-001
CONTROL, AIR DATA	6615-01-092-0363	622-4393-002
CONTROL, AIR DATA	6615-01-188-4494	622-4394-013
TRANSCEIVER, RADIO	5895-01-254-2749	622-5377-001
SELECTOR, FLIGHT MODE	5826-01-188-4493	622-5486-001
COUPLER, ANTENNA	5985-01-151-5848	622-6129-001
ADAPTER, DME	5998-01-308-3066	622-7667-001
TRANSCEIVER, RADIO	5895-01-254-2749	628T-2A
COMPUTER, AIR SPEED	6610-01-101-1905	630-37070-235
RECORDER, SOUND	5835-01-103-7517	642C1
ANTENNA	5985-00-217-0457	65-3569
PUMP, AXIAL PISTONS	4320-01-171-0452	66039-01
VALVE, MODULATING, HOT AIR	4810-00-725-7747	67-2790-001
VALVE, SPEED SENSITIVE	2995-MD-003-4605	6821493S
ANTENNA, VHF	5985-01-097-8681	687122-1
RELAY, HYBRID	5945-00-628-6484	695224-1
LIGHT, LANDING, AIRCRAFT	6220-00-299-4621	695335-5
LIGHT, LANDING, AIRCRAFT	6220-01-316-4577	695335-7
REGULATOR, AIR PRESSURE, CABIN	1660-00-343-4692	695463-3
CONTROLLER, AIR PRESSURE, AIRCRAFT CABIN	1660-00-062-0301	695464-13
THERMOSTAT, FLOW CONTROL	6685-01-119-6546	695539-5
GEARBOX, LANDING	1620-00-617-9123	695579-69
PUMP, ROTARY	4320-00-631-4859	695592-1
ACTUATOR, ELECTRO-MECHANICAL, ROTARY	1680-01-004-2086	695676-11
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-01-217-5837	695676-15
VALVE, FLOAT, FUEL TANK	2915-00-574-3227	695698-3
ACTUATOR, ELEVATOR TRIM TAB, ROTARY	1680-01-013-9501	695700-3
VALVE, SOLENOID CONTROLLED, SHUT-OFF	4810-00-730-2852	695748-13
VALVE, FLOAT, FUEL TANK	2915-00-739-3047	695752-1
WINCH, AIRCRAFT MOUNTED	1680-00-733-3491	695755-1
INDICATOR, FUEL QUANTITY	6680-01-063-0597	695757-31
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-00-088-6102	695775-1

ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-00-981-7652	695775-2
INDICATOR, FUEL QUANTITY	6680-01-056-1779	695797-23
INDICATOR, FUEL QUANTITY	6680-01-060-5228	695797-25
INDICATOR, FUEL QUANTITY	6680-01-058-5859	695797-27
INDICATOR, FUEL QUANTITY	6680-01-058-5861	695797-33
INDICATOR, FUEL QUANTITY	6680-01-058-5862	695797-35
INDICATOR, FUEL QUANTITY	6680-01-058-5860	695797-37
COMPENSATOR, FUEL QUANTITY	6680-01-059-3387	695799-185
TRANSMITTER, OIL QUANTITY	6680-01-419-1995	695800-3
TRANSMITTER, OIL QUANTITY	6680-01-419-1995	695800-5
VALVE, SOLENOID, SHUT-OFF	4810-00-987-3948	695805-1
ACTUATOR, OIL COOLER DOOR, ELECTRO-MECHANICAL	1680-00-073-8204	695807-1
ACTUATOR, OIL COOLER DOOR, ELECTRO-MECHANICAL	1680-01-254-6893	695807-3
ACTUATOR, ELECTRO-MECHANICAL, LINEAR, OIL COOLER DOOR	1680-01-497-7142	695807-7
VALVE, ENGINE, BLEED AIR, CHECK	4820-00-006-5087	695813-1
ACTUATOR, APU DOOR, ELECTRO-MECHANICAL	1680-00-426-5616	695838-3
OVEN, WARMING, ELECTRIC	7310-00-905-6212	695855-5
VALVE, FLUID, REGULATING	4820-00-810-2061	695871-3
DETECTOR, HEAT	6350-01-280-1671	695873-1
DETECTOR, HEAT	6350-01-280-1671	695873-9
SWITCH, PRESSURE	5930-00-615-7340	695906-1
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-00-705-9996	695960-1
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-01-131-0902	695960-7
COOLER, ENGINE, OIL	2935-00-966-3321	697226-1
MOTOR, HYDRAULIC	1650-00-204-1703	697232-1
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-01-221-8261	697235-1
SWITCH, INSTRUMENT	5945-00-075-4925	697273-1
VALVE, BRAKE CONTROL	1630-00-998-7897	697395-1
WHEEL, NOSE LANDING GEAR	1630-00-914-1329	697489-1
SENSOR, DUCT, OVERHEAT	1660-00-583-7106	697639-17
CONTROL BOX, TEMPERATURE	1660-01-014-4509	697639-37
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-01-008-7442	697640-1
INDICATOR, REPEATER, FUEL QUANTITY	6680-01-290-7552	697749-13
INDICATOR, FUEL QUANTITY	6680-01-350-8048	697749-17
INDICATOR, FUEL QUANTITY	6680-01-220-4091	697749-3
INDICATOR, FUEL QUANTITY	6680-01-224-7271	697749-5
INDICATOR, PRIMARY, FUEL QUANTITY	6680-01-290-5920	697749-9
VALVE, OIL COOLER, AUGMENTATION	4810-01-237-5974	697750-1
VALVE, OIL COOLER, AUGMENTATION	4810-01-237-5974	697750-3
VALVE, TEMPERATURE CONTROL, BUTTERFLY	4810-01-218-2643	697752-1
INDICATOR, FUEL QUANTITY	6620-01-394-4018	697883-1
INDICATOR, FUEL QUANTITY	6680-01-394-2555	697883-3
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-00-088-6102	7041-1
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-00-981-7652	7041-2
INDICATOR, HORIZONTAL SITUATION	6610-MD-016-3783	705-12-333
ANTENNA, LOOP	5985-00-149-1451	707881-1
GEAR BOX ASSYFLAP DRIVEMOTOR DRIVEN	1680-00-789-9345	7088-1A
INDICATOR, AIR SPEED	6610-00-526-7944	724DX-4-012
VALVE, FLOAT, FUEL TANK	2915-00-357-2496	731300-3
TRANSMITTER, PRESSURE	6620-00-553-8988	7500-15A5A
GYROSCOPE, RATE OF TURN	6615-00-137-6038	7-511C10035-1
TRANSMITTER, PRESSURE	6685-00-526-7864	7609-36H5-1
TRANSMITTER, PRESSURE	6685-00-526-7864	7609-3705-2
TRANSMITTER, PRESSURE	6685-00-526-7864	7609-37A5-1
TRANSMITTER, PRESSURE	6685-00-526-7864	7609-37B5-2
TRANSMITTER, PRESSURE	6685-00-526-7864	7609-37C5-1
TRANSMITTER, PRESSURE	6685-00-526-7864	7609-37D5-2

TRANSMITTER, PRESSURE	6685-00-526-7864	7609-37H5-1
TRANSMITTER, PRESSURE	6685-00-526-7864	7609-37M5-2
RELAY, HYBRID	5945-00-628-6484	77000546-001
THERMOSTAT, FLOW CONTROL	6685-01-119-6546	77000580-000
TRANSMITTER, PRESSURE	6620-00-553-8988	7700-15A5-1A
TRANSMITTER, PRESSURE	6620-00-553-8988	7700-15A5-2
TRANSMITTER, PRESSURE	6620-00-553-8988	7706-15A5-1
TRANSMITTER, PRESSURE	6620-00-553-8988	7709-15A5-1
TRANSMITTER, PRESSURE	6620-00-553-8988	7709-15-B5-1
VALVE, FLOAT, FUEL TANK	2915-00-739-3047	7-716835
GYROSCOPE, RATE OF TURN	6615-00-134-5980	772-5140-001
GYROSCOPE, RATE OF TURN	6615-01-134-3127	772-5140-002
INDICATOR, COURSE	5826-01-065-9189	772-5370-003
TRANSMITTER PRESSURE	6620-00-901-7848	7745-17A5-1
GYROSCOPE, RATE OF TURN	6615-00-134-5980	777-1034-001
SELECTOR, HEADING, REMOTE	5826-01-065-9132	792-6221-001
CONTROLLER, AUTOPILOT	6615-01-038-7299	792-6348-005
INDICATOR, ATTITUDE DIRECTOR	6610-01-013-8911	792-6357-002
INDICATOR, ATTITUDE DIRECTOR	6610-01-013-8911	792-6357-008
GYROSCOPE, VERTICAL	5826-00-348-3874	792-6694-001
SERVO, AUTO-PILOT, PRIMARY	6615-01-037-7780	792-6781-001
SERVO, AUTO-PILOT, PRIMARY	6615-01-037-7780	792-6781-003
MOUNT, AUTO-PILOT, SERVO	6615-01-037-7780	792-6784-003
MOUNT, AUTO-PILOT, SERVO	6615-01-065-9448	792-6785-002
TRANSMITTER, EMERGENCY LOCATOR (ELT)	5826-01-307-7380	7938174-60
TRANSMITTER, PRESSURE	6685-00-526-7864	7MJ1
ACTUATOR, ELEVATOR TRIM TAB, ROTARY	1680-01-013-9501	8037M1
ACTUATOR, ELEVATOR TRIM TAB, ROTARY	1680-01-013-9501	8037M2
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-01-009-8293	8067-1A
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-01-009-8294	8067-2A
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-01-131-0901	8067-3A
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-01-131-0902	8067-4A
ANTENNA CONTROL SUBASSEMBLY	5985-01-447-0682	808352/000
SWITCH, PRESSURE	5930-00-615-7340	80C705
RECEIVER, VOR/ILS RADIO NAVIGATION	5895-01-493-8421	822-0760-002
RECEIVER, VOR/ILS RADIO NAVIGATION	5826-01-481-6179	822-0761-001
TRANSCEIVER, RADIO VHF	5820-01-474-0840	822-1046-001
TRANSCEIVER, RADIO VHF	5820-01-517-3020	822-1046-101
DETECTOR, ICE	6340-00-304-5556	831-0001
FUSE, HYDRAULIC SYSTEM	1650-00-815-2499	831-8-10
GEARBOX, LANDING	1620-00-617-9123	8348M1
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-01-324-8157	8445M1
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-01-472-9783	8446M1
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-01-217-5837	8545M1
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-01-222-2551	8546M1
LIGHT, LANDING, AIRCRAFT	6220-00-299-4621	8555M1
LIGHT, LANDING, AIRCRAFT	6220-01-316-4577	8555M6
LIGHT, LANDING, AIRCRAFT	6220-01-657-7449	8555M9
TRANSCEIVER, RADIO ALTIMETER	-----	860F-1
CLOCK, MECHANICAL, PANEL	6645-00-076-3050	86400-1110
INDICATOR, PRESSURE	6620-00-514-5334	86425-4
ACTUATOR, ELECTRO-MECHANICAL, LINEAR, OIL COOLER DOOR	1680-01-497-7142	8656M2
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-00-073-8204	880T100
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-01-254-6893	880T100-3
TRANSMITTER PRESSURE	6620-00-901-7848	89000-1
DETECTOR, HEAT	6350-01-280-1671	891041-100
INDICATOR, THERMOCOUPLE, TEMPERATURE	6685-01-096-6867	8DJ179WAD1

INDICATOR, RUDDER, POSITION	6610-00-580-9690	8DJ49GAY
INDICATOR, RUDDER, POSITION	6610-00-580-9690	8DJ49GAY1
INDICATOR, RUDDER, POSITION	6610-00-580-9690	8DJ49GAY2
INDICATOR, FUEL FLOW	6620-01-038-5769	8DJ64GBH1
INDICATOR, FUEL FLOW	6620-00-551-2631	8DJ71GAB
INDICATOR, FUEL FLOW	6620-00-551-2631	8DJ71GAB1
INDICATOR, ELECTRICAL TACHOMETER	6620-01-157-9266	8DJ81CBD4
TRANSMITTER, FLOWMETER	6620-00-720-3223	8TJ50GAS5
POWER SUPPLY, FUEL FLOW	6130-00-772-8567	8TJ51GAA5
THERMOSTAT, FLOW CONTROL	6685-01-119-6546	90007105-000
POWER SUPPLY, AIRSPEED INDICATOR	6130-01-217-5880	915-38106-001
FAN, VANE, AXIAL	4140-01-041-4886	917108-1
CLOCK, MECHANICAL, PANEL	6645-00-076-3050	925659-02
CLOCK, MECHANICAL, PANEL	6645-00-076-3050	925659-04
DETECTOR, ICE	6340-00-304-5556	931-0001
WHEEL, MAIN LANDING GEAR	1630-01-094-1104	9550616-1
BRAKE, MULTIPLE DISK	1630-01-500-1903	9560685-1
POWER SUPPLY, DC	6130-00-958-9796	976J198-1
THERMOSTAT, FLOW CONTROL	6685-01-119-6546	98B3900
CONTROL, SENSITIVE, SPEED	2915-00-464-6946	9901-300
CONTROL, SENSITIVE, SPEED	2915-00-464-6946	9901-301
INDICATOR, TORQUEMETER	6620-01-206-5748	9A1100
INDICATOR, TORQUEMETER	6620-01-264-8685	9A2100
INDICATOR, THERMOCOUPLE, TEMPERATURE	6685-00-148-8247	9A375
INDICATOR, THERMOCOUPLE, TEMPERATURE	6685-00-148-8247	9A-375
CLOCK, MECHANICAL, PANEL	6645-00-950-8599	A-11
CLOCK, MECHANICAL, PANEL	6645-00-950-8599	A13A1
CLOCK, MECHANICAL, PANEL	6645-00-880-5927	A13A2
CLOCK, MECHANICAL, PANEL	6645-01-633-0303	A-13A-2
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-00-705-9996	A487-3
ACTUATOR, ELEVATOR TRIM TAB, ROTARY	1680-00-672-8931	A489-3

ACTUATOR, ELEVATOR TRIM TAB, ROTARY	1680-00-672-8931	A489-4
ACTUATOR, ELEVATOR TRIM TAB, ROTARY	1680-01-013-3229	A489-5
CONTROL, INTERCOMMUNICATION SET	5831-00-523-5328	A81-91
RELAY, HYBRID	5945-00-628-6484	A-846-6
INDICATOR, PRESSURE	6685-00-514-5061	AAF224225
CLOCK, MECHANICAL, PANEL	6645-00-076-3050	ABU11A
INDICATOR, PRESSURE	6685-00-514-5061	AC1061P
INDICATOR, PRESSURE	6685-00-514-5061	AC106-1P
INDICATOR, PRESSURE	6685-00-514-5061	AC106IP
INDICATOR, ATTITUDE DIRECTOR	-----	ADI-55V
RELAY, HYBRID	5945-00-628-6484	AE111-002-99
INDICATOR, PRESSURE	6685-00-514-5061	AF200
INDICATOR, PRESSURE	6685-00-514-5061	AF200A
INDICATOR, PRESSURE	6685-00-514-5061	AF200AW
INDICATOR, PRESSURE	6685-00-514-5061	AF200AW1
AMPLIFIER, ELECTRONIC CONTROL	5996-00-507-1381	AM-203C/ARA-19
AMPLIFIER, ELECTRONIC CONTROL	5996-00-507-1381	AM203CARA19
AMPLIFIER, AUDIO FREQUENCY	5996-00-543-1423	AM-944/AIC-13
TRANSCEIVER, RADAR	5841-00-089-7179	AN/APX-72
TRANSCEIVER, UHF, RADIO	5821-00-100-7931	AN/ARC159
LIGHT, SIGNAL	5850-00-729-1595	AN3089-10
VOLTMETER, D/C	6625-00-235-4782	AN3203V30
CLOCK, MECHANICAL, PANEL	6645-00-950-8599	AN5743-1A
CLOCK, MECHANICAL, PANEL	6645-00-950-8599	AN5743T1A
TRANSMITTER, POSITION	6610-00-530-0961	AN5787-1
FUSE, HYDRAULIC SYSTEM	1650-00-815-2499	AN6281-8-10
INDICATOR, HORIZONTAL SITUATION	6605-00-034-2500	AQU-2/A
ANTENNA, RADAR	5985-01-282-7892	AS-1199B/APN-59
ANTENNA, RADAR	5985-01-282-7892	AS1199BAPN59
ANTENNA, LOOP	5985-00-149-1451	AS-313B/ARN-6
ANTENNA, LOOP	5985-00-149-1451	AS313BARN6
ANTENNA, WEATHER, RADAR	5985-01-194-2321	AS-3440A/APS-133(V)
ANTENNA, UHF, BLADE	5985-00-217-0457	AT-256A/ARC
ANTENNA, DME/TACAN, BEACON	5985-00-673-5831	AT-740/A
ANTENNA	5985-00-106-0906	AT-741B/A
GAGE, PRESSURE, DIAL INDICATING	6685-00-726-2538	AW17-8-14EL
INDICATOR, PRESSURE	6685-00-514-5061	AW1833AB01
INDICATOR, PRESSURE	6685-00-514-5061	AW1833AC01
FAN, VANE, AXIAL	4140-01-041-4886	AXIMAX3-1140YH
FAN, VANE, AXIAL	4140-01-041-4886	AXIMAX3-1140YS
FAN, VANE, AXIAL	4140-01-041-4886	AXIMMAX3-1140YS
SENSOR, DUCT, OVERHEAT	1660-00-583-7106	AYLF50679
RELAY, ELECTROMAGNETIC	5945-00-675-7413	B123B
RELAY, ELECTROMAGNETIC	5945-00-675-7413	B-123B
RELAY, ELECTROMAGNETIC	5945-00-675-7413	B123J
RELAY, ELECTROMAGNETIC	5945-00-675-7413	B-123J
RELAY, ELECTROMAGNETIC	5945-00-675-7412	B-124K
LIGHT, SIGNAL	5850-00-729-1595	B2516B10
LIGHT, SIGNAL	5850-00-729-1595	B-2516B-10
ALTIMETER, PRESSURE	6610-01-038-2122	B4515210103
RELAY, ELECTROMAGNETIC	5945-01-384-4323	B459
RELAY, ELECTROMAGNETIC	5945-01-384-4323	B-459
RELAY, ELECTROMAGNETIC	5945-00-675-7412	B-460
INDICATOR, BATTERY TEMPERATURE	-----	BTI600-102A-1
VALVE, TEMPERATURE CONTROL, BUTTERFLY	4810-01-218-2643	BYLB51044
CONTROL PANEL, TACAN, TRANSCEIVER	5895-01-012-7084	C-10057/A
CONTROL PANEL, DIRECTION FINDER	5826-00-535-6629	C-1513/A

CONTROL PANEL, DIRECTION FINDER	5826-00-535-6629	C-1513/ARN-6
CONTROL PANEL, DIRECTION FINDER	5826-00-535-6629	C1513A
CONTROL, PUBLIC ADDRESS SET	5831-00-106-2733	C-1614/AIC13
FAN, CENTRIFUGAL	4140-00-564-5980	C19A513
CONTROL, INTERCOMMUNICATION SET	5831-00-523-5328	C3942(P)/AIC18
CONTROL, INTERCOMMUNICATION SET	5831-00-523-5328	C-3942(P)/AIC-18
CONTROL, INTERCOMMUNICATION SET	5831-00-523-5328	C3942PAIC18
TRANSMITTER, EMERGENCY LOCATOR (ELT)	5821-01-561-9503	C406-N
ALTIMETER, ENCODER	6610-00-405-6461	C4154210003
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-00-088-6102	C7041-1
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-00-981-7652	C7041-2
GEAR BOX ASSYFLAP DRIVEMOTOR DRIVEN	1680-00-789-9345	C7088-1A
SWITCH, FUEL FILTER, PRESSURE	5930-00-965-7111	CG12313F
RELAY, ELECTROMAGNETIC	5945-00-728-3191	CH-26
COUPLER, ANTENNA	5985-00-939-7495	CU1669GRC
COUPLER, ANTENNA	5985-01-151-5848	CU-2275(V)2
VALVE, ENGINE, BLEED AIR, CHECK	4820-00-006-5087	CYLB51055
POWER UNIT & GEARCASE, LIGHT	3010-00-635-4730	D5725
ADAPTER, DME	5998-01-308-3066	DDA-42
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-00-617-9128	DL1326M11
ANTENNA	5985-01-433-9503	DMN4-33-3
INDICATOR, THERMOCOUPLE, TEMPERATURE	6685-00-933-7911	DST29-3
INDICATOR, AIR SPEED	6610-00-585-1524	E0724104003
INDICATOR, AIR SPEED	6610-00-585-1524	E07241-04-003
RELAY, HYBRID	5945-00-628-6484	E-323E
RELAY, HYBRID	5945-00-628-6484	E-323E-1
RELAY, HYBRID	5945-00-628-6484	E-323E-1A
RELAY, HYBRID	5945-00-628-6484	E-384
TRANSMITTER, OIL QUANTITY	6680-01-419-1995	EA1065AW2315
TRANSMITTER, OIL QUANTITY	6680-01-419-1995	EA1065AW-2315
INDICATOR, RUDDER, POSITION	6610-00-580-9690	EA326-8
TRANSMITTER, POSITION	6610-00-530-0961	EA573-1
TRANSMITTER, POSITION	6610-00-530-0961	EA573A1
TRANSMITTER, POSITION	6610-00-530-0961	EA573A-1
TRANSMITTER, POSITION	6610-00-530-0961	EA573A11
COMPENSATOR, FUEL QUANTITY	6680-00-869-9811	EA7722856
POWER SUPPLY, DC	6130-00-958-9796	ECU-23/A
CONTROL PANEL, DIRECTION FINDER	5826-00-535-6629	ED101
INDICATOR, ANTI-ICING	6685-00-692-8341	EKCC18043
VALVE, FLOAT, FUEL TANK	2915-00-574-3227	F60W0232M1
COMPENSATOR, FUEL QUANTITY	6680-01-059-3387	FG450A51
RELAY, ELECTROMAGNETIC	5945-00-675-7412	G-1152-B460-C
CONTROL, ATC	6220-01-362-0390	G4020
LIGHT, LANDING, AIRCRAFT	6220-00-299-4621	G-5400-1
LIGHT, LANDING, AIRCRAFT	6220-00-299-4621	G-5400-3
LIGHT, LANDING, AIRCRAFT	6220-00-893-8777	G-5400-5
LIGHT, WARNING, NAVIGATION	6220-00-548-0008	G-6965-13
LIGHT, WARNING, NAVIGATION	6220-00-548-0008	G-6965-15
LIGHT, WARNING, NAVIGATION	6220-00-548-0008	G-6965-34
LIGHT, WARNING, NAVIGATION	6220-00-421-9109	G-6965-8
LIGHT, WARNING, NAVIGATION	6220-00-548-0008	G-6965-9
INDICATOR, VERTICAL VELOCITY	6610-00-111-3159	GA3090MS
GYROSCOPE, RATE OF TURN	6615-00-137-6038	GG2479AB01
GYROSCOPE, RATE OF TURN	6615-00-137-6038	GG2-79
FUSE, HYDRAULIC SYSTEM	1650-00-815-2499	GHN10255-1
INDICATOR, HORIZONTAL SITUATION	6605-01-101-1883	HSI-45
INDICATOR, BEARING-DISTANCE-HEADING	5826-00-032-7024	ID1103ARN

INDICATOR, RADIO MAGNETIC	5826-00-505-3094	ID-250A/ARN
INDICATOR, BEARING DISTANCE HEADING	5826-00-089-7912	ID-663C/U
INDICATOR, WEATHER, RADAR	5841-01-193-6436	IP-1374A/APS-133(V)
INDICATOR, FUEL QUANTITY	6680-01-056-1779	JG402A52
INDICATOR, FUEL QUANTITY	6680-01-056-1779	JG402A-52
INDICATOR, FUEL QUANTITY	6680-01-060-5228	JG402A53
INDICATOR, FUEL QUANTITY	6680-01-060-5228	JG402A-53
INDICATOR, FUEL QUANTITY	6680-01-058-5859	JG402A54
INDICATOR, FUEL QUANTITY	6680-01-058-5859	JG402A-54
INDICATOR, FUEL QUANTITY	6680-01-058-5860	JG402A55
INDICATOR, FUEL QUANTITY	6680-01-058-5860	JG402A-55
INDICATOR, FUEL QUANTITY	6680-01-063-0597	JG412A52
INDICATOR, FUEL QUANTITY	6680-01-063-0597	JG412A-52
INDICATOR, FUEL QUANTITY	6680-01-058-5861	JG412A53
INDICATOR, FUEL QUANTITY	6680-01-058-5861	JG412A-53
INDICATOR, FUEL QUANTITY	6680-01-058-5862	JG412A54
INDICATOR, FUEL QUANTITY	6680-01-058-5862	JG412A-54
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-01-008-7442	L16-107
ACTUATOR, OIL COOLER DOOR, ELECTRO-MECHANICAL	1680-00-720-5810	L16-8-1
ACTUATOR, OIL COOLER DOOR, ELECTRO-MECHANICAL	1680-00-720-5810	L16-8-3
ANTENNA, DME/TACAN, BEACON	5985-00-673-5831	M25707/1-01
ANTENNA, UHF, BLADE	5985-00-217-0457	M5815/1-01
INDICATOR, PRESSURE	6685-00-514-5061	MA-1
INDICATOR, FUEL FLOW	6620-00-551-2631	MA-7
CLOCK, MECHANICAL, PANEL	6645-00-076-3050	MC7545
MOTOR, HYDRAULIC	1650-00-540-0162	MF30-3913-25ZE5
MOTOR, HYDRAULIC	1650-00-204-1703	MF30-3913-30ZE5
MOTOR, HYDRAULIC	1650-00-815-9387	MF9-3911-30ZS481
POWER CONVERTER, DC/AC	6125-00-020-3217	MGE23-400
POWER CONVERTER, DC/AC	6125-00-020-3217	MGE23-400A
ANTENNA, DME/TACAN, BEACON	5985-00-673-5831	MIL-A-25707/1
ACCELEROMETER, MECHANICAL	6610-00-007-1030	MIL-A-25719
ANTENNA, UHF, BLADE	5985-00-217-0457	MIL-A-5815/1
CLOCK, MECHANICAL, PANEL	6645-00-076-3050	MILC38207
CLOCK, MECHANICAL, PANEL	6645-00-076-3050	MIL-C-38207
CLOCK, MECHANICAL, PANEL	6645-00-150-6526	MIL-C-6499
CLOCK, MECHANICAL, PANEL	6645-00-150-6526	MIL-C-6499A
CLOCK, MECHANICAL, PANEL	6645-00-950-8599	MIL-C-6499A TYPE A13A
CLOCK, MECHANICAL, PANEL	6645-00-950-8599	MILC6499ATYPEA13A
CLOCK, MECHANICAL, PANEL	6645-00-150-6526	MIL-C-6499B
CLOCK, MECHANICAL, PANEL	6645-00-150-6526	MIL-C-6499C
CLOCK, MECHANICAL, PANEL	6645-00-150-6526	MIL-C-6499D
CLOCK, MECHANICAL, PANEL	6645-00-150-6526	MIL-C-6499E
ANTENNA, DME/TACAN, BEACON	5985-00-673-5831	MIL-DTL-25707
ANTENNA, DME/TACAN, BEACON	5985-00-673-5831	MIL-DTL-25707/1
TRANSMITTER PRESSURE	6620-00-901-7848	MIL-DTL-38394
INDICATOR, ELECTRICAL TACHOMETER	6620-01-322-7678	MIL-I-25623
INDICATOR, HORIZONTAL SITUATION	6605-00-034-2500	MIL-I-26689
INDICATOR, PRESSURE	6685-00-514-5061	MIL-I-5099
INDICATOR, MACH AND TRUE AIR SPEED	6610-00-006-5783	MIL-I-5392A
INDICATOR, AIR SPEED	6610-00-585-1524	MIL-I-6447A TYPE M1A
INDICATOR, ANTI-ICING	6685-00-530-3614	MILI9343
INDICATOR, ANTI-ICING	6685-00-530-3614	MIL-I-9343
LIGHT, SIGNAL	5850-00-729-1595	MIL-L-6723
TRANSMITTER, PRESSURE	6685-00-526-7864	MIL-T-25307
TRANSMITTER, PRESSURE	6685-00-526-7864	MIL-T-25307D
TRANSMITTER PRESSURE	6620-00-901-7848	MIL-T-38394

TRANSMITTER, PRESSURE	6620-00-553-8988	MIL-T-5882D
INDICATOR, ANTI-ICING	6685-00-530-3614	MJ1
INDICATOR, ANTI-ICING	6685-00-530-3614	MJ-1
ANTENNA, LOOP	5985-00-149-1451	MN95A
PUMP, AUXILIAR	4320-00-174-5811	MPEV3-032-2
PUMP, AUXILIAR	4320-00-174-5811	MPEV3-032-2A
POWER CONVERTER, DC/AC	6125-00-020-3217	MS17404-2
GENERATOR, TACHOMETER	6680-00-553-8892	MS25038-4
TRANSMITTER, PRESSURE	6620-00-553-8988	MS28005-1
TRANSMITTER, PRESSURE	6685-00-526-7864	MS28005-5
TRANSMITTER, PRESSURE	6685-00-526-7864	MS28005-8
INDICATOR, PRESSURE	6620-00-514-5334	MS28010-1
INDICATOR, RADIO MAGNETIC	5826-00-505-3094	MS28027-1
TRANSMITTER, ANGLE OF ATTACK	6610-00-719-6882	MS28066-30
INDICATOR, VERTICAL VELOCITY	6610-00-473-5046	MS28075-1
INDICATOR, VERTICAL VELOCITY	6610-00-473-5046	MS28075-1B
LIGHT, SIGNAL	5850-00-729-1595	MS28925-9
ANTENNA, LOOP	5985-00-149-1451	N212254-1
ANTENNA, LOOP	5985-00-149-1451	N212254-2
DECODER	5841-00-464-0335	NA126D2
VALVE, FLUID, REGULATING	4820-00-810-2061	NA5-8218-3
DIRECTION FINDER SET	5826-01-008-4097	OA-8697/ARD
SWITCH, PRESSURE	5930-00-615-7340	P16M-3
SWITCH, PRESSURE	5930-00-615-7340	P46D-18
POWER SUPPLY, RADAR	6130-01-056-8665	PP1073C/APN59
POWER SUPPLY, RADAR	6130-01-056-8665	PP-1073C/APN-59
POWER SUPPLY, RADAR	6130-01-056-8665	PP1073CAPN59
INDICATOR, RADAR, LIGHT	6210-01-408-7389	PPI-1T
VALVE, OIL COOLER, AUGMENTATION	4810-01-237-5974	PYLB51239
VALVE, OIL COOLER, AUGMENTATION	4810-01-619-3259	PYLB51239-1
VALVE, OIL COOLER, AUGMENTATION	4810-01-237-5974	PYLB51239-2
TRANSCEIVER, RADIO COMPASS	5826-00-543-0829	R-101/ARN-6
TRANSCEIVER, RADIO COMPASS	5826-00-241-1011	R101AARN6
TRANSCEIVER, RADIO COMPASS	5826-00-543-0829	R101ARN6
ACTUATOR, APU DOOR, ELECTRO-MECHANICAL	1680-00-474-3300	R5170M34-3
ACTUATOR, APU DOOR, ELECTRO-MECHANICAL	1680-00-426-5616	R5170M34-4
SWITCH, PRESSURE	5930-00-615-7340	R6607-2-14
INDICATOR, VERTICAL VELOCITY	6610-00-111-3159	RC60MS
INDICATOR, VERTICAL VELOCITY	6610-00-111-3159	RC-60MS
INDICATOR, ELECTRICAL TACHOMETER	6620-01-322-7678	RCA41A-07
INDICATOR, VERTICAL VELOCITY	6610-00-473-5046	RCS60-1L
TRANSMITTER, ANGLE OF ATTACK	6610-00-719-6882	RL50PE
TRANSCEIVER, WEATHER, RADAR	5841-01-194-2452	RT-1338A/APS-133(V)
TRANSCEIVER, RADAR	5841-01-282-7093	RT289G/APN59
TRANSCEIVER, RADAR	5841-01-282-7093	RT-289G/APN-59
TRANSCEIVER, VHF, RADIO	5821-01-038-7301	RT-5048/ARC-511(V)
TRANSCEIVER, RADIO VHF	5820-01-517-3020	RT-5048D/ARC-511(V)
TRANSCEIVER, RADIO	5821-00-893-2906	RT-648/ARC-94
TRANSCEIVER, RADAR	5841-00-089-7179	RT859A/APX-72
TRANSCEIVER, WEATHER, RADAR	5841-01-314-9947	RTA-1FB(M)
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-01-221-8261	RYLC51047
ACTUATOR, ELECTRO-MECHANICAL, LINEAR	1680-01-221-8261	RYLC51047-1
LIGHT, EMERGENCY EXIT	6220-00-370-5447	S2204-105
SELCAL, DECODER	-----	SC2253A
TRANSMITTER, PRESSURE	6685-00-526-7864	SCD10175
INDICATOR, MACH AND TRUE AIR SPEED	6610-01-109-5105	SK40LC1
TRANSMITTER, ANGLE OF ATTACK	6610-00-719-6882	SLZ2501

MOTOR, HYDRAULIC	1650-00-204-1703	SP9509
INDICATOR, PRESSURE	6620-00-514-5334	SR6A
INDICATOR, PRESSURE	6620-00-514-5334	SR-6A
TRANSMITTER, PRESSURE	6620-00-526-7917	ST104A
PRESSURE TRANSMITER	6620-00-526-7917	ST-104A
TRANSMITTER, PRESSURE	6685-00-526-7864	ST207A
TRANSMITTER, PRESSURE	6685-00-526-7864	ST-207A
TRANSMITTER, PRESSURE	6620-00-553-8988	ST4F
TRANSMITTER, PRESSURE	6620-00-553-8988	ST-4F
TRANSMITTER, PRESSURE	6620-00-553-8988	ST6B
TRANSMITTER, PRESSURE	6620-00-553-8988	ST-6B
TRANSMITTER, PRESSURE	6620-00-553-8988	ST6C
TRANSMITTER, PRESSURE	6620-00-553-8988	ST-6C
TRANSMITTER, PRESSURE	6685-00-526-7864	ST7A
TRANSMITTER, PRESSURE	6685-00-526-7864	ST-7A
TRANSMITTER, PRESSURE	6685-00-526-7864	ST7B
TRANSMITTER, PRESSURE	6685-00-526-7864	ST-7B
TRANSMITTER, PRESSURE	6685-00-526-7864	ST7C
TRANSMITTER, PRESSURE	6685-00-526-7864	ST-7C
TRANSMITTER, PRESSURE	6685-00-526-7864	ST7D
TRANSMITTER, PRESSURE	6685-00-526-7864	ST-7D
GENERATOR, TACHOMETER	6680-00-445-1246	TG255-002
TRANSMITTER, PRESSURE	6685-00-526-7864	TRK-56/A27J-1
TRANSMITTER, PRESSURE	6620-00-901-7848	TRU-81/A
TRANSMITTER PRESSURE	6620-00-901-7848	TRU81A
VALVE, FLUID, REGULATING	4820-00-810-2061	W1121F8-9-0
CLOCK, MECHANICAL, PANEL	6645-00-950-8599	W33-7540
CLOCK, MECHANICAL, PANEL	6645-00-089-7903	W33-7545-10
CLOCK, MECHANICAL, PANEL	6645-00-089-7903	W33-7545-4
INDICATOR, ELECTRICAL TACHOMETER	6620-01-191-9514	RCA41-07
INTERFACE UNIT, COMMUNICATION EQUIPMENT	5895-01-480-4311	3614331-1004
INTERFACE UNIT, COMMUNICATION EQUIPMENT	5895-01-454-1407	3614331-1005
VALVE,LINEAR,DIRECTIONAL CONTROL	4810-00-208-9693	47560
VALVE,LINEAR,DIRECTIONAL CONTROL	4810-00-208-9693	4810PL0855420
VALVE,LINEAR,DIRECTIONAL CONTROL	4810-00-208-9693	695526-3